

# NordicRetro

## Retro Gamestick **User Manual**




# Table of Contents

<b>Front page</b> .....	<b>1</b>
<b>Table of Contents</b> .....	<b>2</b>
<b>Structure</b> .....	<b>3</b>
Gamestick .....	
Controllers .....	
<b>Setup</b> .....	<b>6</b>
Gamestick .....	
TV & Controller .....	
<b>Functions</b> .....	<b>8</b>
<b>Problems</b> .....	<b>11</b>
<b>Safety instructions</b> .....	<b>12</b>
<b>Disclaimer</b> .....	<b>13</b>
<b>Read this before use</b> .....	<b>14</b>
<b>FCC Statement</b> .....	<b>15</b>

# Structure


## GameStick

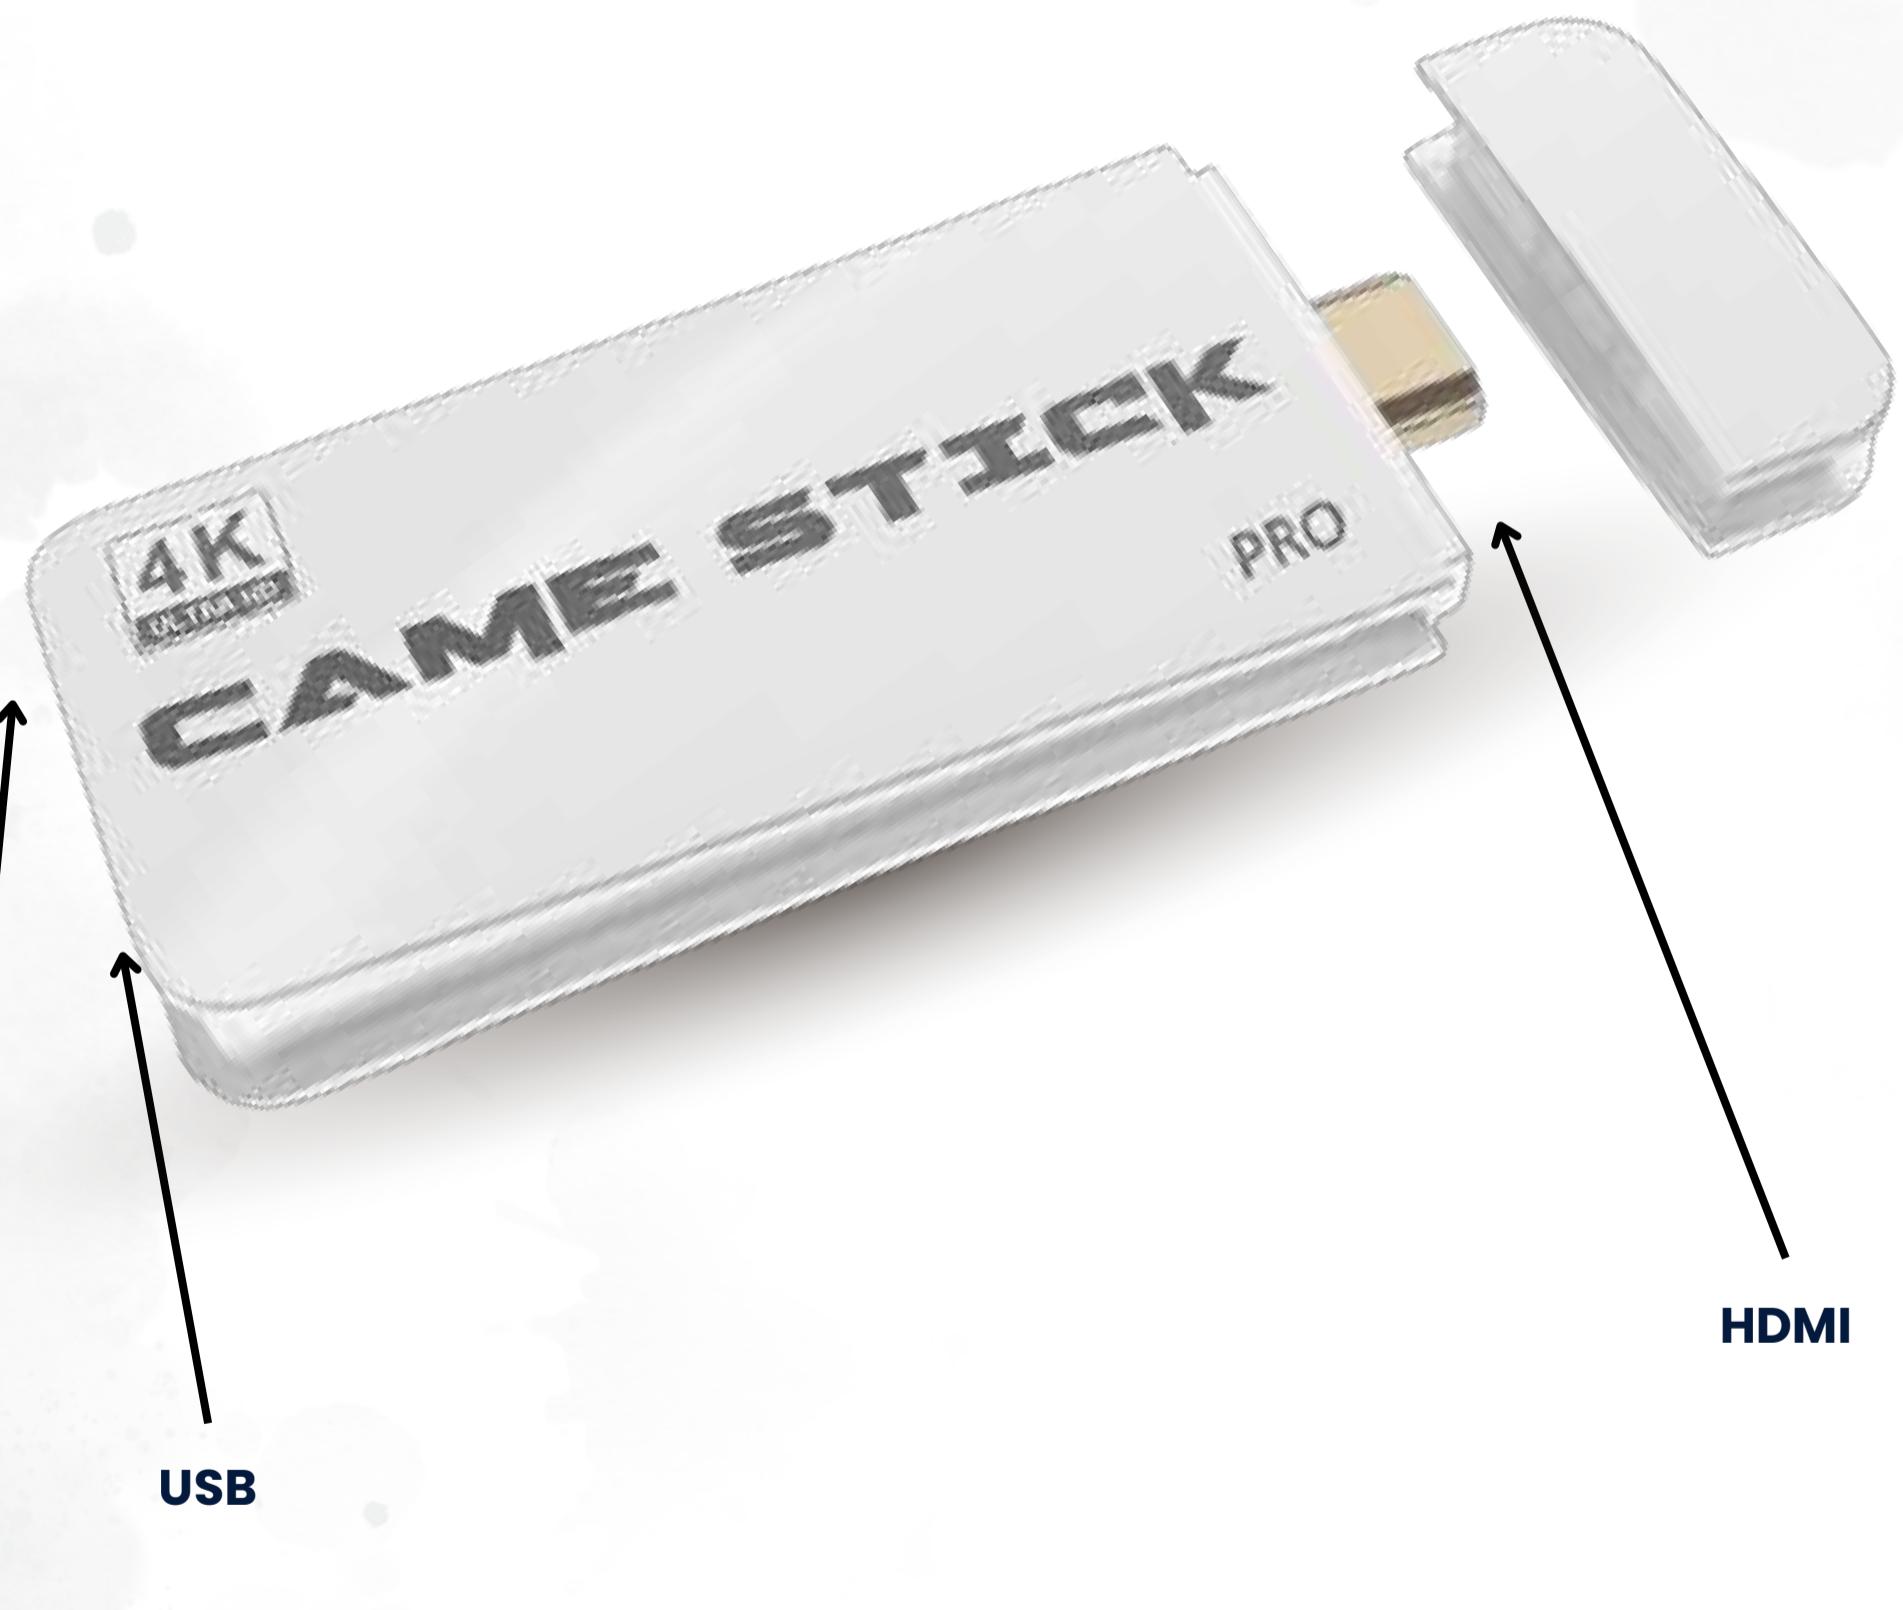

Micro USB

# Structure

## GameStick

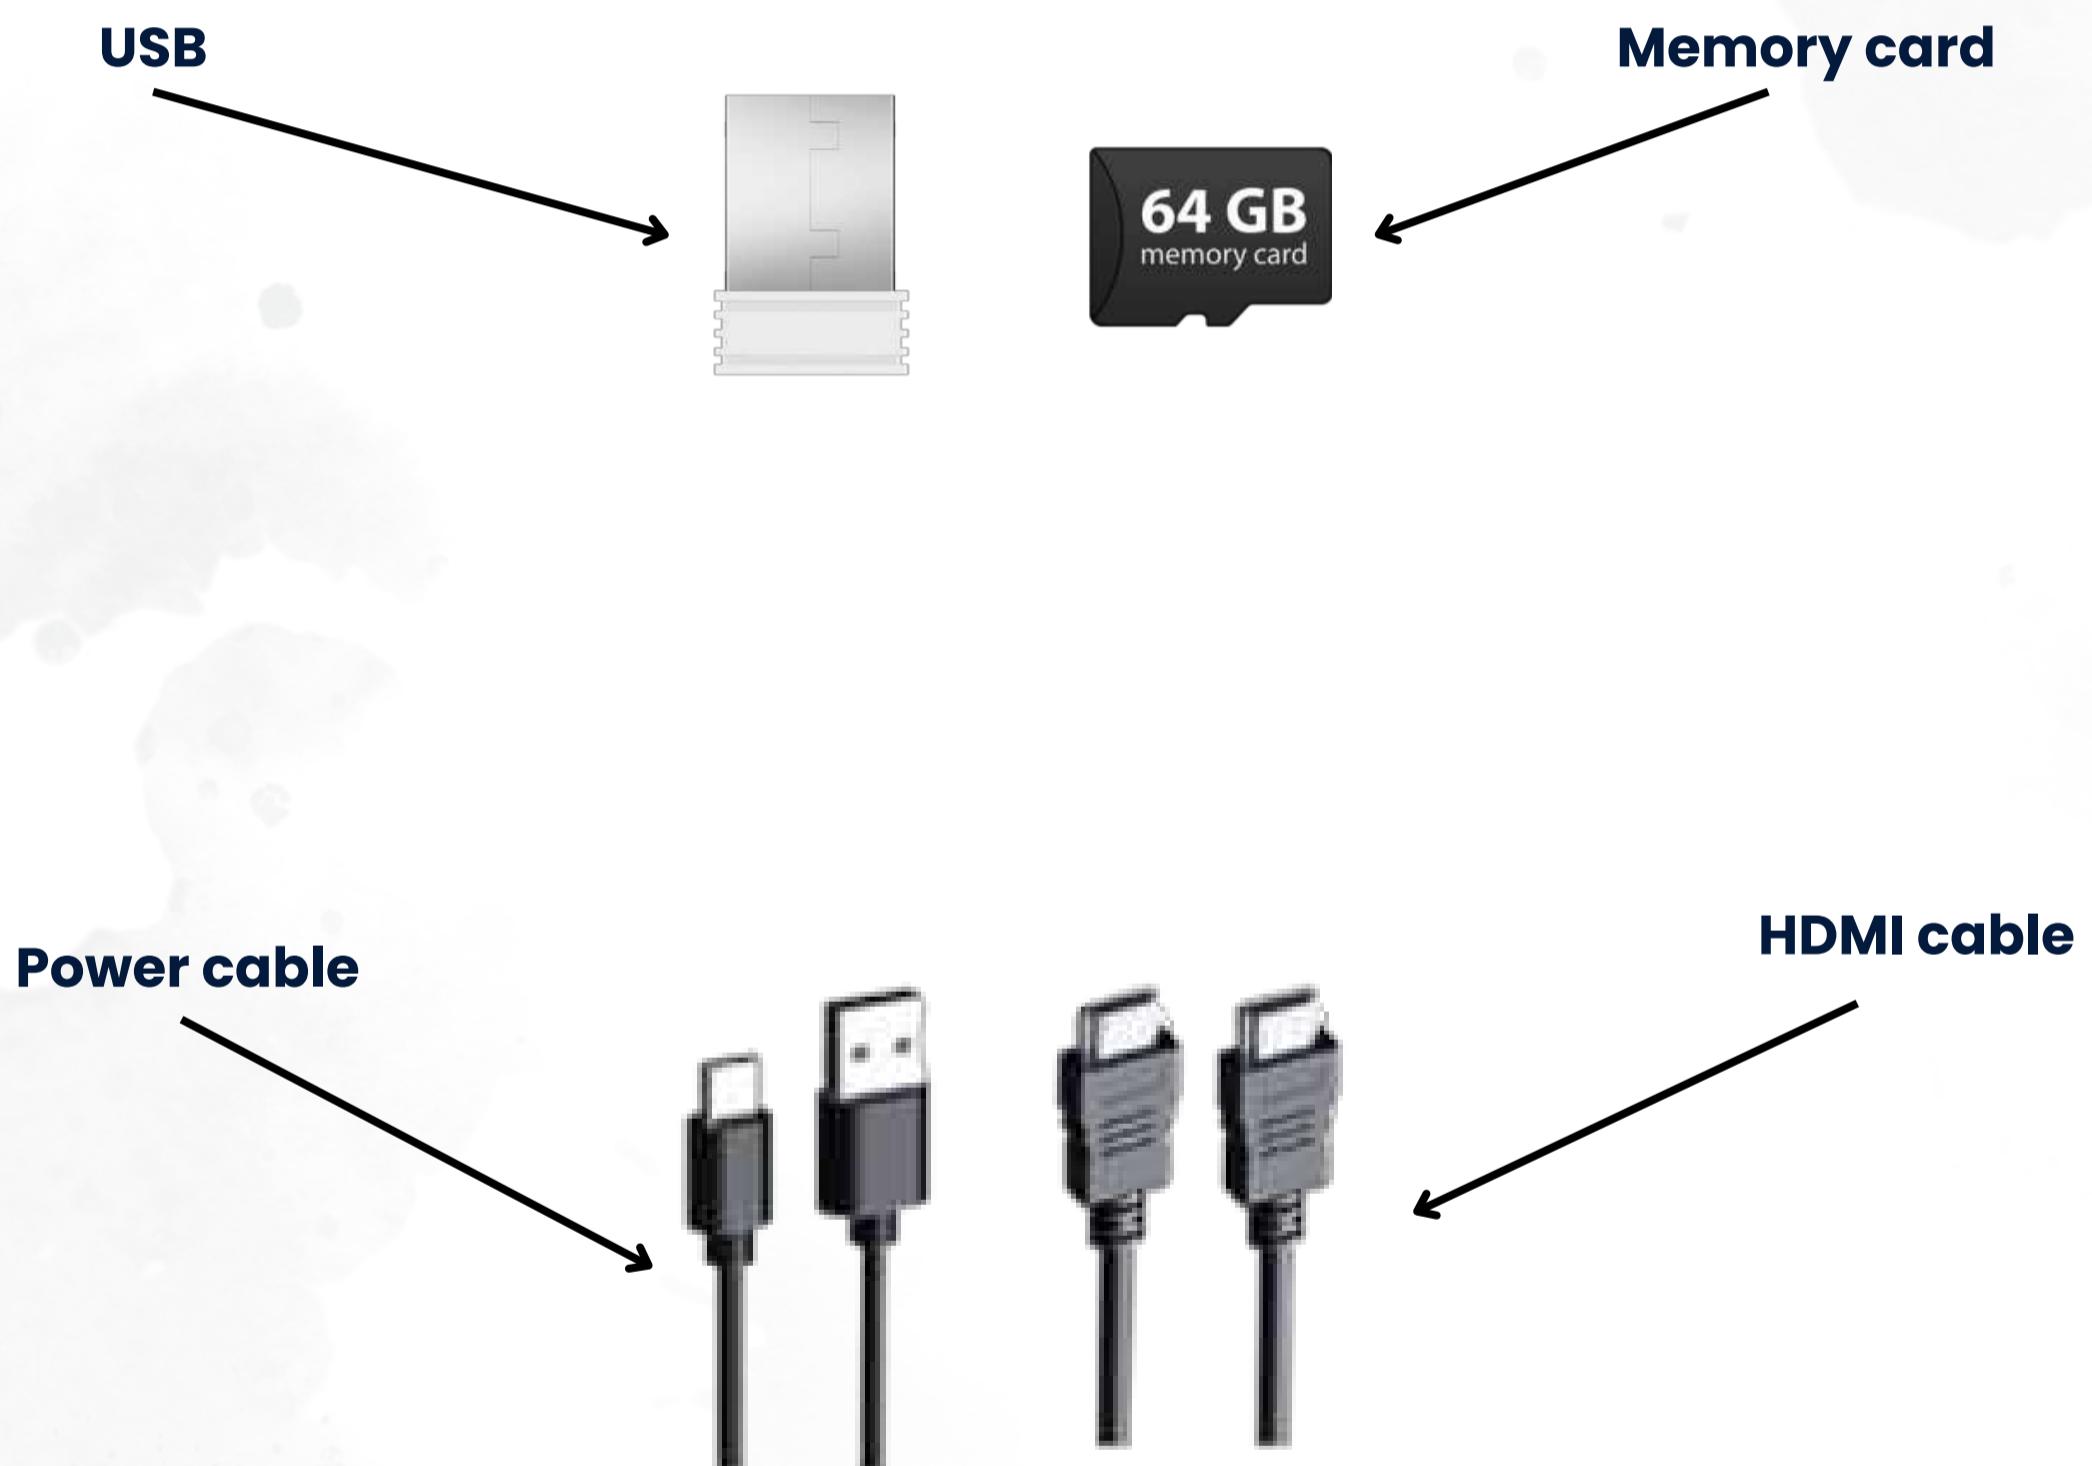


# Structure

## Controllers



# Setup

## Gamestick

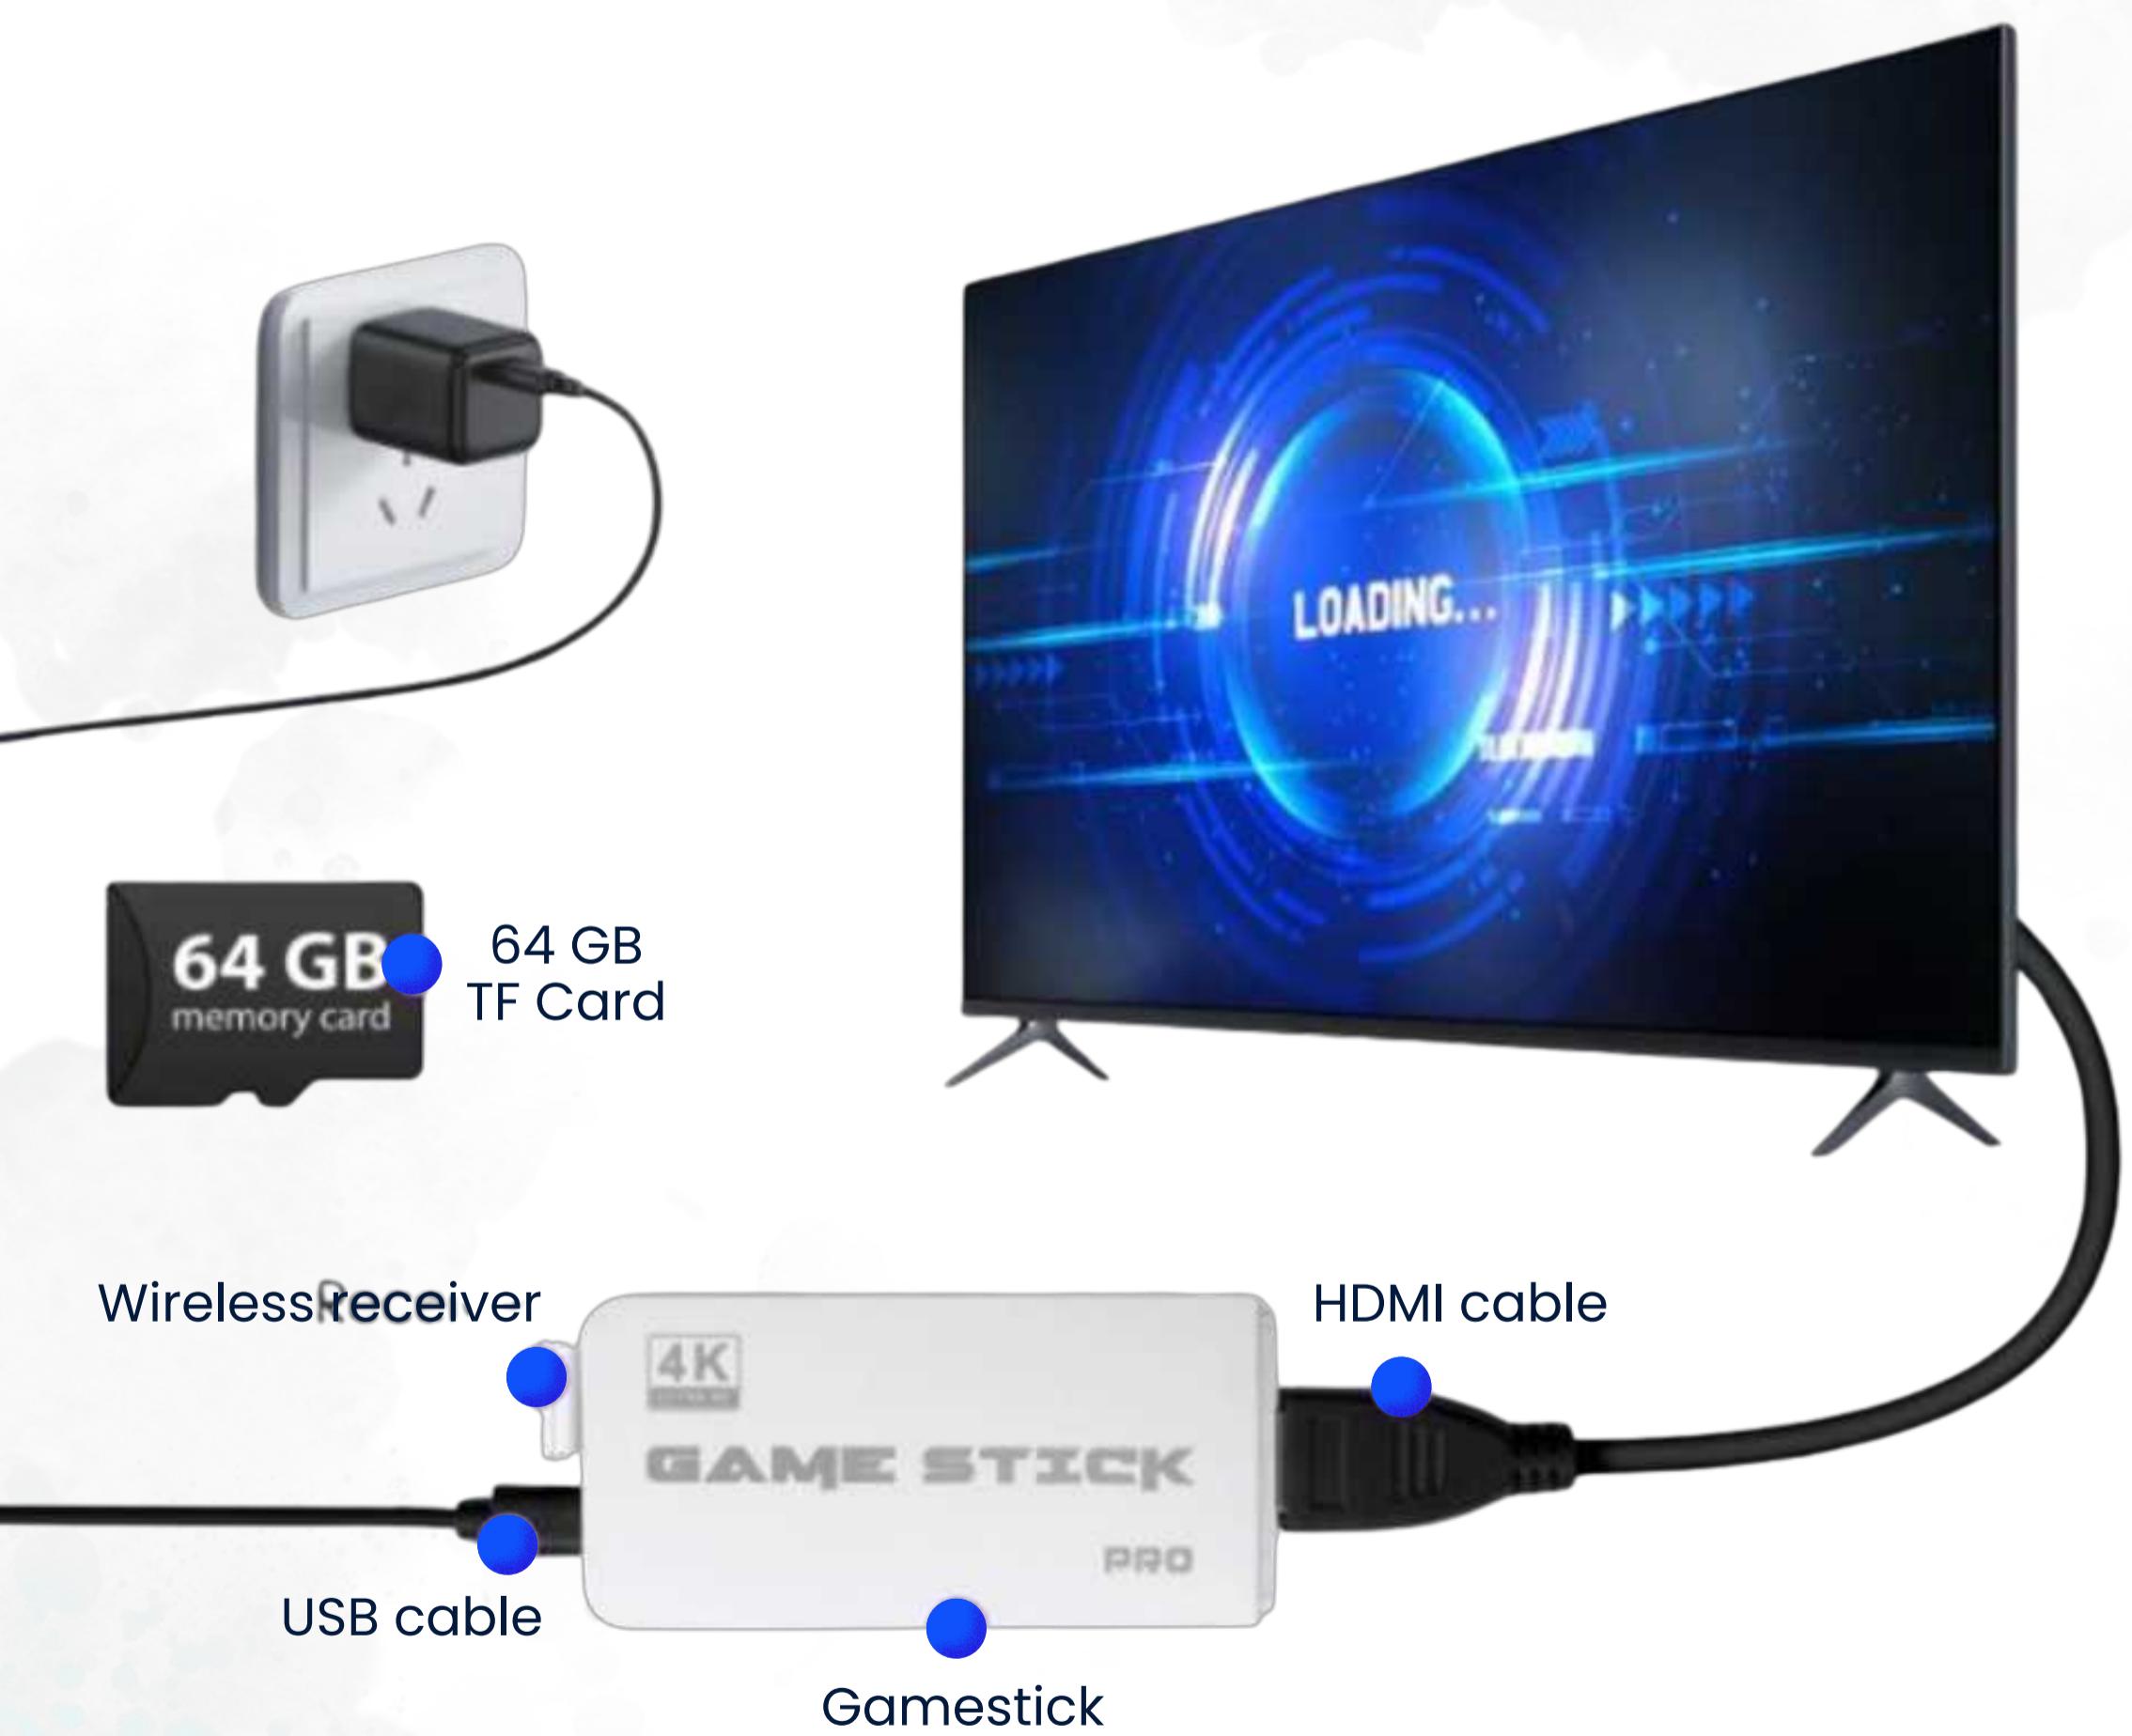

# Setup

## TV & Controller

1. Once all cables are connected and the console is hooked up to the TV, you should switch to the correct HDMI using the remote. From there, you should see the main menu.
2. Now you need to set up the controllers. Each controller uses 2 AAA batteries, which must be inserted on the back.

You should open the small cover and once the batteries are in, turn on the button on the front of the controller. The controller should then start to light up.

Remember: If the controller does not light up, you can try adjusting the batteries a little as this can sometimes help.




# Functions

1. All games on the Gamestick are displayed on this page. You can scroll left and right to choose between the different game consoles.



2. In the bottom right corner, you are presented with options to search for specific games by pressing "Y". You can also go to the menu to change the language or browse between the different game consoles. You also have the option to view your favorite games.

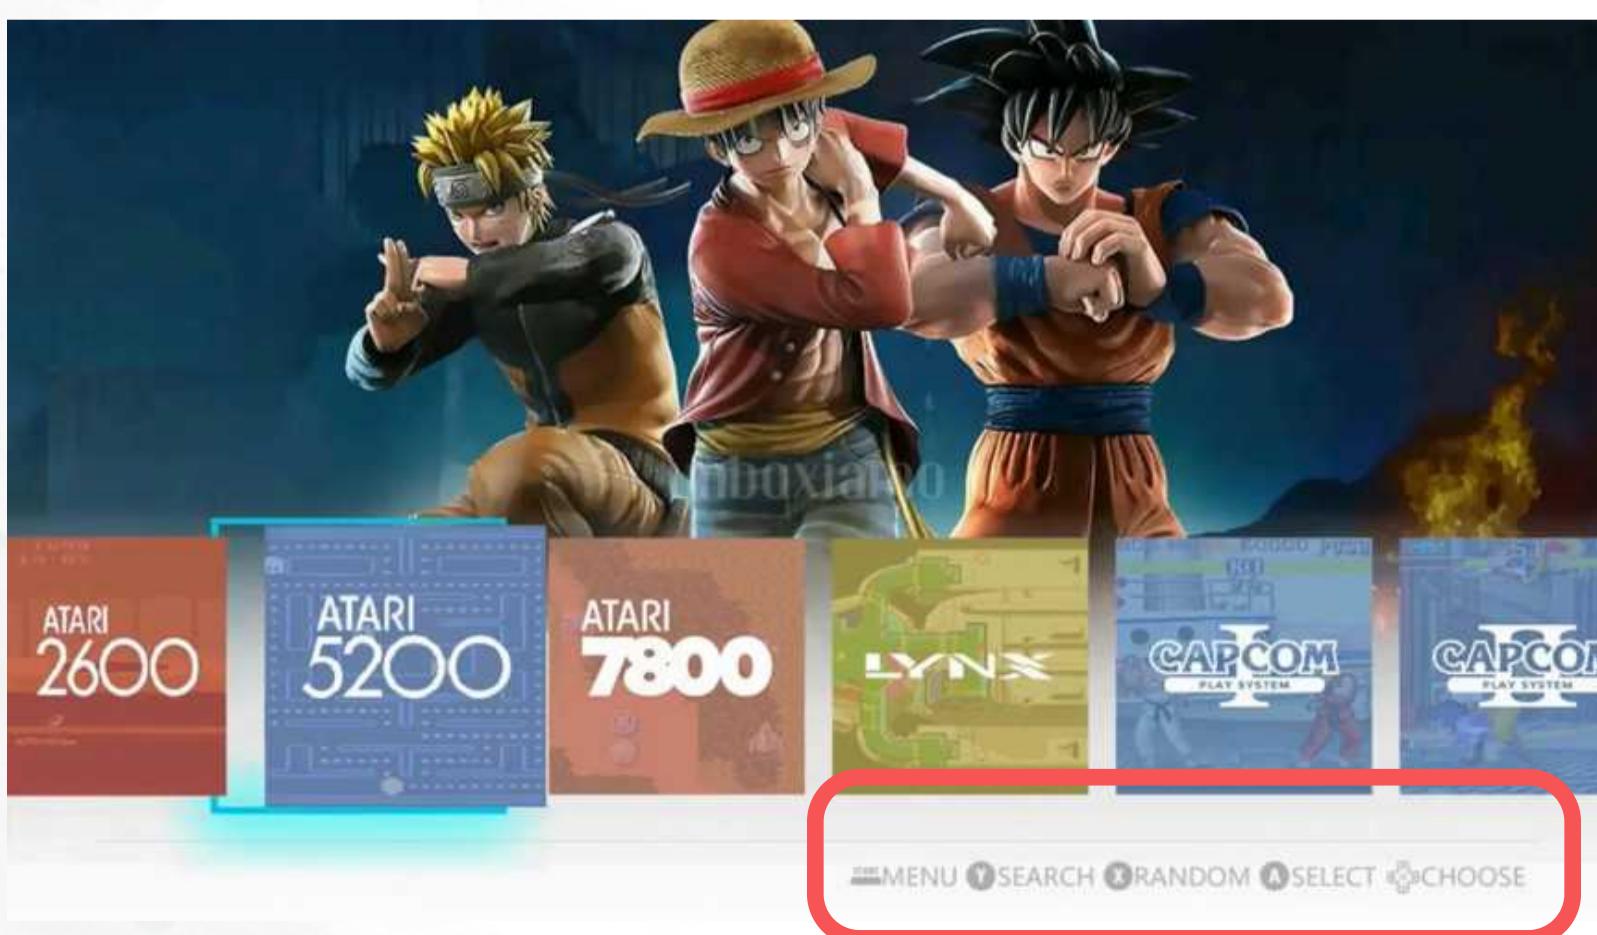



# Functions

Once you have selected a game console, such as "PlayStation", you will be presented with a wide selection of games. You can browse through them by pressing the up or down arrow or by using the directional buttons.

In the bottom right corner of the screen, you will also see several options:

- Press "Y" to search for games
- Press "X" to save a game as a favorite

If a game is saved as a favorite, you can return to the home screen and view all your favorite games in a folder.

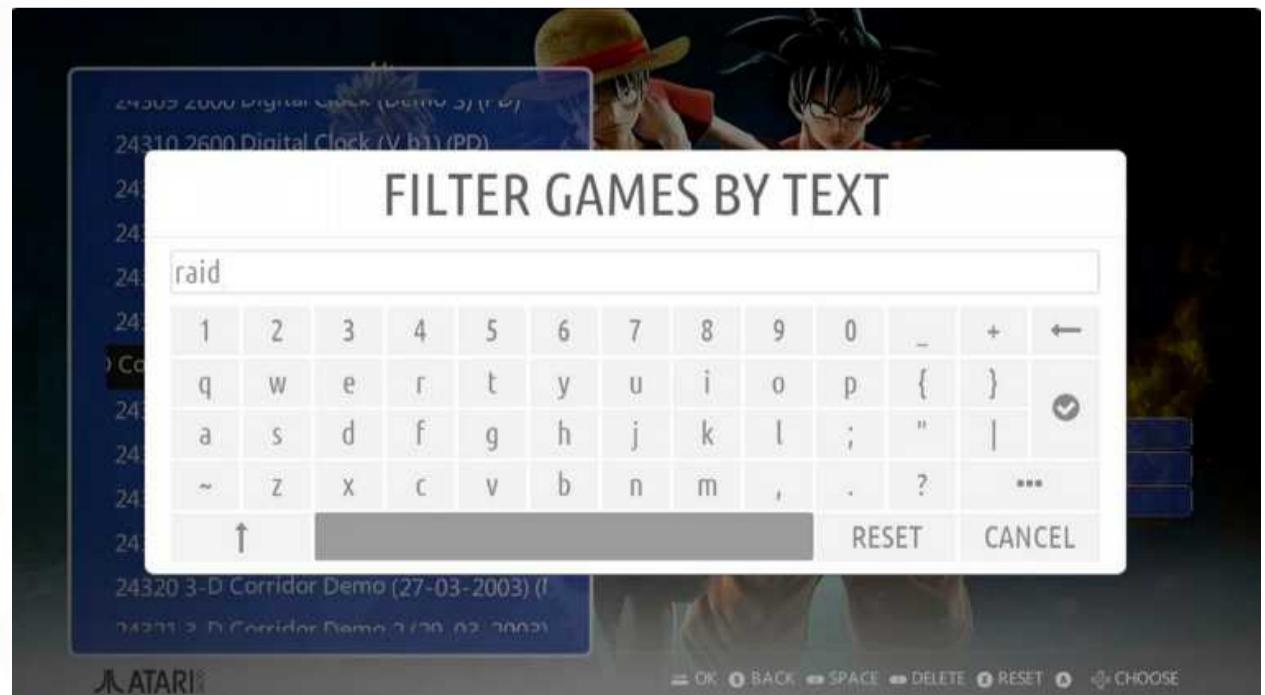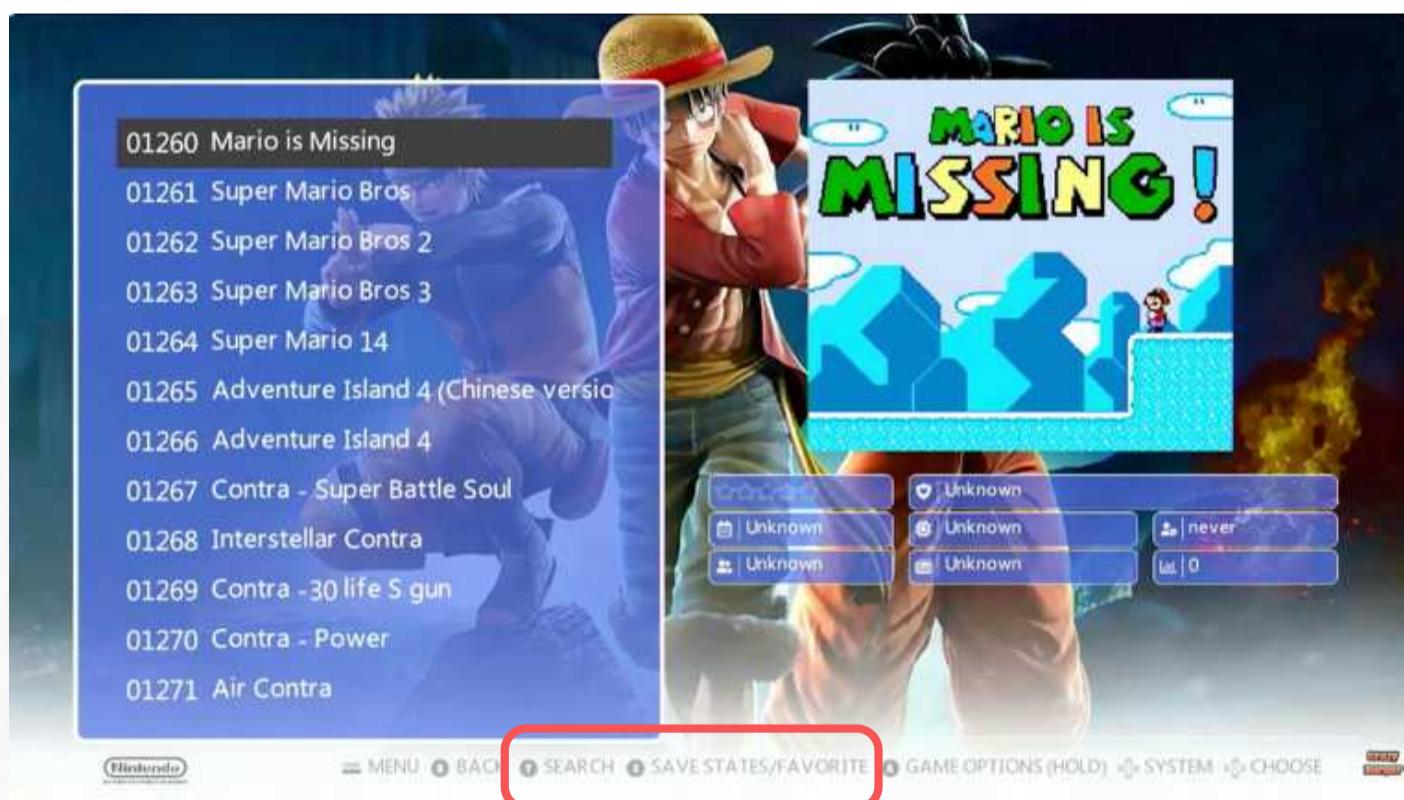

# Functions

When you are in a game and want to exit it or save your progress, press "Select" and "Start" at the same time.

The menu will then appear, and you can choose between the options shown in the image below.



# Problems

The following is for you in case you experience problems with the controller, Gamestick, or anything else during the setup. If this does not help, please contact our customer service at [info@nordic-retro.com](mailto:info@nordic-retro.com) – we will be happy to assist you.

## **Controller Problems:**

1. Insert the USB receiver (the small black USB stick) into the Gamestick.
2. Make sure the Gamestick is connected to both the HDMI and the power via the USB cable.
3. Insert new batteries into the controllers.
4. Turn on the controller by pressing the Start/Power button.

## **Does Not Appear on TV:**

If you have set everything up and it still does not appear, you can try the following:

1. Remove the console from the TV and take all the parts apart.
2. Assemble it again and push the connectors in a little harder to make sure they are not loose.
3. Try different HDMI ports on the TV and without the HDMI extender.
4. Try both with the USB cable in the TV and in the adapter.

Often, problems with getting the picture to appear are caused by the connectors not being properly inserted. Sometimes you just need to try several times or in different ways.

# Safety Instructions

To ensure proper use and a longer lifespan of the Gamestick console, it is important to follow these guidelines:

1. Read the safety information before using the console.
2. Installation and repair must be carried out by qualified personnel. Use only undamaged cables and accessories.
3. Do not place the console near flammable materials, explosive areas, or strong electromagnetic interference. Avoid direct sunlight.
4. Make sure the ventilation openings are not blocked so the console can cool properly.
5. Always use the supplied power supply or a compatible 5V/1A USB adapter.
6. Do not look directly at the indicator lights for extended periods.
7. Handle cables carefully: do not bend or pull them, do not place them under heavy objects, do not cover them, and avoid heat and moisture.
8. Use the console only indoors on a stable surface.
9. Small parts are dangerous for children under 3 years. Children aged 6–14 must use the console under supervision.
10. Disconnect the power when the console is not in use for an extended period.

By following these instructions, you minimize the risk of injury to people and damage to the device – and get the most out of your Retro Gamestick.

# Disclaimer

This manual contains general instructions. Illustrations and features may differ from the actual product.

We are continuously working to improve the console's performance and reserve the right to change features, software, and the user interface without prior notice.

The product should be stored and used responsibly. We assume no responsibility for any loss or damage resulting from incorrect use of hardware or software, unauthorized repairs, or other misuse. We are also not responsible for losses related to third-party claims.

We disclaim any liability for printing or spelling errors in the manual.

# Read This Before Use

Please read the following carefully and keep the manual for future reference.

- 1.** Keep all packaging materials away from children under 3 years (choking hazard).
- 2.** Children aged 6 to 14 should only use the console under adult supervision.
- 3.** Use only the supplied power supply or a 5V/1A charger.
- 4.** If the temperature is 0 °C or lower, let the console sit at room temperature for 2 hours before use.
- 5.** Place the console on a stable surface – avoid moisture, dust, and direct sunlight.
- 6.** Use only original cables and controllers for proper operation.
- 7.** Do not look directly at the indicator lights for extended periods.
- 8.** Do not open or repair the console yourself – this may void the warranty.
- 9.** Read the entire manual and keep it for future reference. Turn off and disconnect the power when the console is not in use for an extended period. Ensure proper ventilation so the console does not overheat.

# FCC Statement

Denne enhed overholder del 15 af FCC-reglerne. Brug er underlagt følgende betingelser:

1. Enheden må ikke forårsage skadelig interferens.
2. Enheden skal acceptere enhver interferens, herunder interferens, der kan medføre uønsket drift.
3. Ændringer eller modifikationer, som ikke er godkendt af den ansvarlige part, kan ugyldiggøre brugerens ret til at anvende udstyret.

**Bemærk:**

- Udstyret er testet og fundet i overensstemmelse med grænserne for en klasse B digital enhed i henhold til del 15 af FCC-reglerne. Grænserne er fastsat for at sikre rimelig beskyttelse mod skadelig interferens i private installationer.
- Enheden genererer og anvender radiofrekvensenergi, og kan udsende denne energi. Hvis den ikke installeres eller bruges korrekt, kan det medføre forstyrrelser i radiokommunikation. Der gives dog ingen garanti for, at interferens ikke kan forekomme i en bestemt installation.

Hvis enheden forårsager interferens med radio- eller tv-modtagelse (kan testes ved at tænde/slukke for enheden), anbefales følgende:

- Justér eller flyt modtagerantennen.
- Øg afstanden mellem enheden og modtageren.
- Tilslut enheden til en anden strømkreds end den, modtageren bruger.
- Kontakt forhandler eller en kvalificeret radio-/tv-tekniker for hjælp.

# FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following conditions:

1. The device may not cause harmful interference.
2. The device must accept any interference received, including interference that may cause undesired operation.
3. Changes or modifications not approved by the responsible party may void the user's authority to operate the equipment.

**Note:**

- The equipment has been tested and found to comply with the limits for a Class B digital device under Part 15 of the FCC Rules. The limits are set to provide reasonable protection against harmful interference in residential installations.
- The device generates and uses radio frequency energy and may radiate it. If not installed or used properly, it may cause interference to radio communications. There is no guarantee, however, that interference will not occur in a particular installation.

If the device causes interference with radio or television reception (which can be tested by turning the device off and on), the following measures are recommended:

- Adjust or relocate the receiving antenna.

Increase the distance between the device and the receiver.

- Connect the device to a power outlet on a circuit different from that of the receiver.
- Consult the dealer or a qualified radio/TV technician for assistance.